

HOW TO CHANGE A KEYPAD

You will need:

- Phillip's Head Screw Driver
- Camera (Optional)
- Dull Knife (Optional)

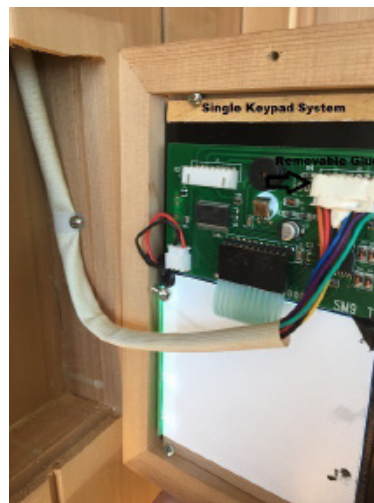 
IMPORTANT: UNPLUG THE SAUNA BEFORE STARTING.

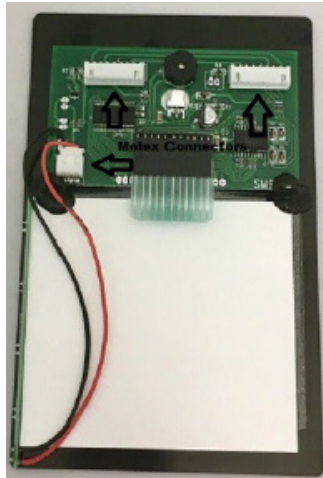 
Our Sauna Keypads have changed over the years, but the steps to change them out have primarily stayed the same.



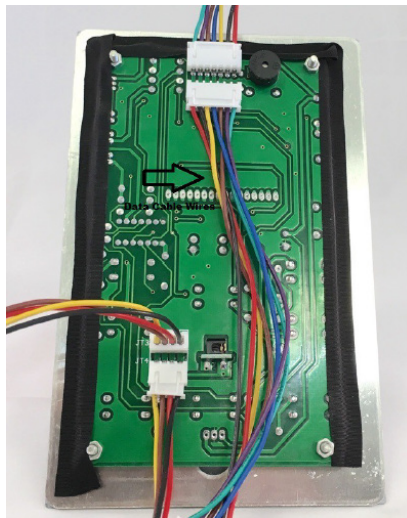 
Step 1

Notice the wooden frame with two screws around the Keypad, unscrew them to gain access to the Keypad itself. If you have a two Keypad Sauna only the inside wooden frame has screws to gain access to both Keypads.



**Step 2**

Pull the Keypad from the wall and look for the Molex wire connections on the Keypad. The connector with the most wires is called the Data Cable. Depending on the Keypad model the Data Cable might not match the replacement Keypad, make sure to check that connector before proceeding.

**Step 3**

Disconnect the Molex connectors, don't worry if the Keypad has extra unused connectors. Connectors might also be covered in a white glue, this is easily removed with either fingernails or a dull knife. It is a good idea to take a picture of the Keypad connections before removing it from the Sauna.

Step 4

Set aside the old Keypad and reverse the steps, taking care to make sure the replacement Keypad connectors are firmly seated and the wood frame is screwed back in tightly.