


Infrared Saunas and Wellness Solutions



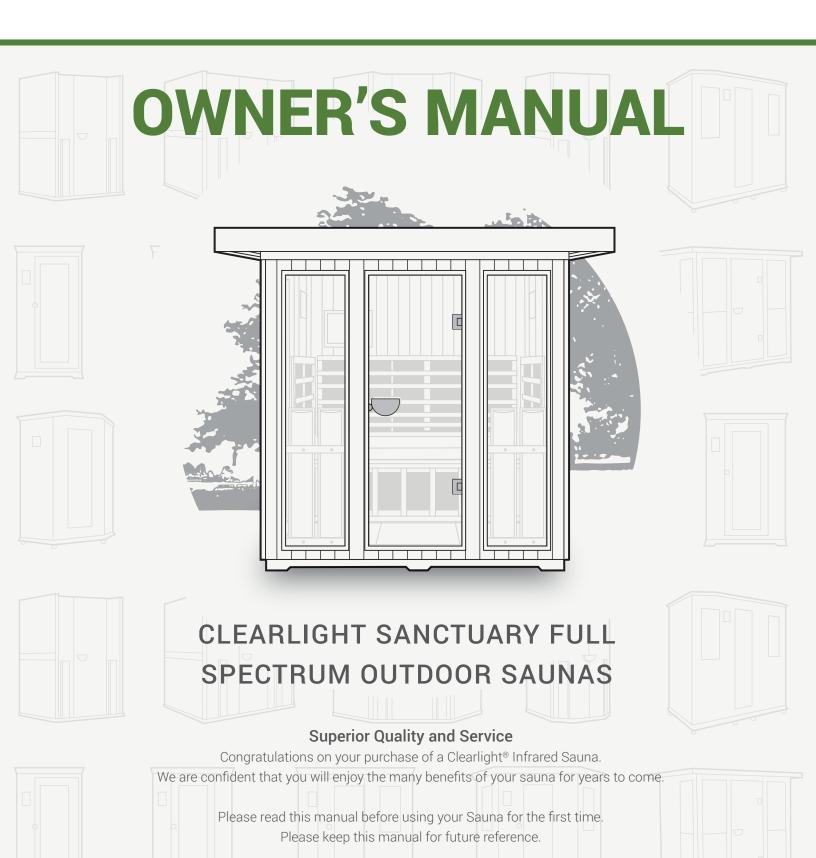

Welcome	03
Installation	04
01   OUTDOOR 2 AND OUTDOOR 5	05
Enjoying Your Sauna	20
Using Your Sauna Control Panel	21
Tips for Use	25
Safety Instructions	27
Important Safeguards	29
Warranty	31

\* The information contained in this manual is subject to change without notice.



# **LL** Dear Customer,

Thank you for choosing Clearlight® saunas. We realize that you have many choices.

The Clearlight® brand is known the world over for three important factors:

- 1) Exceptional Customer Service
- 2) Quality workmanship
- 3) Superior product performance

We use only the finest materials with expert craftsmanship, state of the art technology, and the highest safety standards in the industry. We also offer our residential customers a lifetime warranty on all Clearlight® infrared saunas.

You may be surprised at the noticeable effects on pain, weight, skin tone, and stress after using your Clearlight® sauna. We invite you to experience the difference: superior quality, service and performance.

We thank you for your purchase and look forward to serving you further. After using your sauna, please tell your friends about the positive changes that you see. We find that this simple communication from one person to another is the best way to share the story of health found by using our unique infrared saunas.

Please contact me directly with any questions, comments or suggestions.

I look forward to hearing from you.

Sincerely,

Dr. Raleigh Duncan | CEO

Sauna Works Inc.

800.798.1779 x 804 | International: +1.510.601.1775



# Installation

# **Choosing a location**

Your Clearlight Sanctuary Outdoor Sauna can be used outside without a cover. Place your sauna on a level surface that will not flood. The saunas are very heavy so a solid foundation is recommended.



**Note**: While the Sanctuary Outdoor saunas are designed to be placed outside, choosing a location without excessive rain and wind is recommended.

Installation requirements for your sauna are as follows:


- 1. Your Clearlight® sauna is a self-contained and freestanding unit. Please contact your Infrared Sauna Specialist for information about building the unit inside an enclosed space.
- 2. Please maintain a minimum of 4-inch clearance on all sides of the unit to allow air to circulate while giving access for the power cord.
- 3. The Sanctuary Outdoor Saunas must be installed on a level surface. The roof cap system is designed to allow water to run off the back of the roof. If the surface is not level, the water will pool on the roof and may cause damage to the sauna.

# Cleaning and maintenance

- 1. Before using your sauna for the first time, clean the inside of the sauna with a damp cloth. Use your favorite furniture polish on the exterior.
- 2. Place a towel on the bench to absorb any perspiration. Wash these often to maintain a clean and pleasant environment inside your sauna.
- 3. Perspiration may darken the wood over time. This can be removed by a light sanding with fine grit sandpaper.




Please be careful when carrying and installing the glass pieces to avoid breakage.

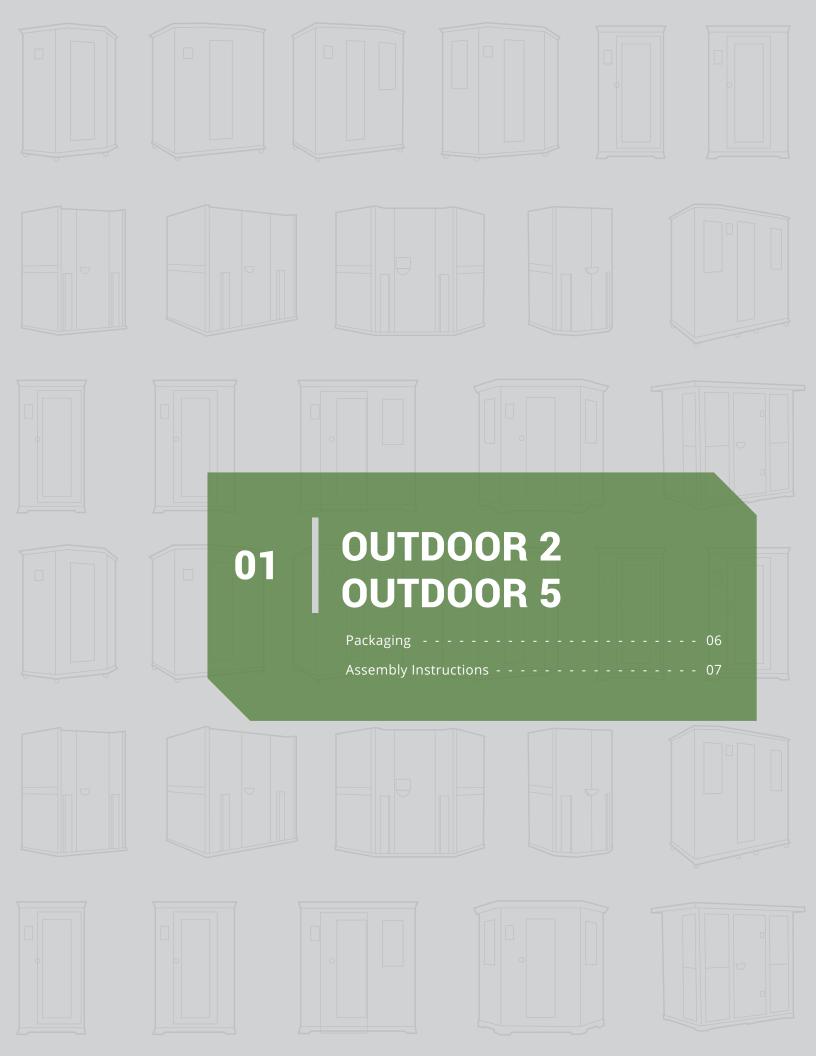



# **Packaging**

CONTENTS OF BOXES			
Box 1 of 5	Box 2 of 5	Box 3 of 5	Box 4 of 5
1. Floor Panel	1. Left Side Wall	1. Front Wall	1. Front Heaters
2. Ceiling Panel	2. Right Side Wall	2. Back Wall	
3. Accessories		3. Bench & Bench Support	Box 5 of 5
4. Installation Manual			1. Roof Cap

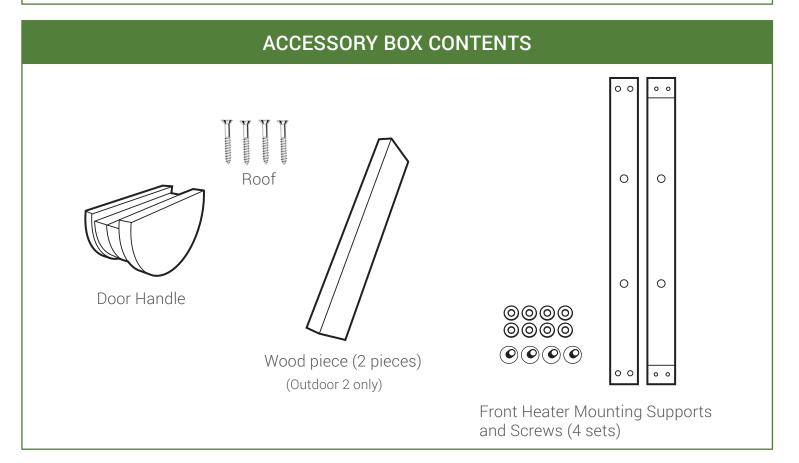



# **Assembly Instructions**

Assembly of the sauna requires three adults to complete. Please read the instructions thoroughly before and during assembly to ensure proper installation of the unit. If you encounter any problems or have questions during assembly, please feel free to call our Customer Service department at 1-800-798-1779 or +1-510-601-1775.

### 1 - LOCATION OF SAUNA & INSTALLATION ORDER

When determining a location for your sauna, please keep in mind the following:

- 1. The main power cord on the sauna must be easily accessible.
- 2. The location must be dry and level.
- 3. Panels should be installed in the following order:

-	\	_		
П	)	H	$\cap$	or

4) Right Side Wall

7) Front Wall

2) Back Wall

- 5) Under Bench Support
- 8) Ceiling

3) Left Side Wall

6) Bench


9) Roof Cap


### 2 - PLACING FLOOR PANEL

 Place the bottom floor panel on the ground near the location you will using the sauna.
Make sure the front of the floor is in the desired location of the door. The floor receptacles indicate the front of the sauna.



1. Place the back panel on the floor panel by placing it in the groove of the floor panel.

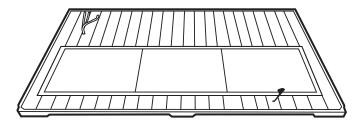

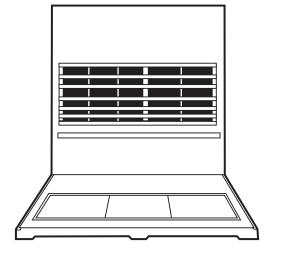




### 4 - CONNECTING SIDE WALLS


The side wall panels connect to the back wall with the installed locking brackets. There are mating brackets on the side of each panel.

- 1. Place the left side wall in the slot in the floor. Lift the side wall up about 4" (10cm) higher than the backwall panel (See Picture 1).
- 2. Place the side wall panel against the back wall (See Picture 2), then slide down side wall panel until the two panels are equal height. (See Picture 3).
- 3. If the panels are not equal height or there is an obvious gap between the two panels, this means they are not propery attached and you should try again.
- 4. Repeat the steps above for the right side wall panel.

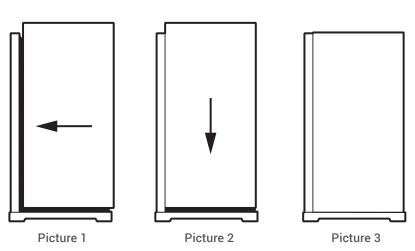




If the panels still seem too tight to come down all the way, try backing off the bracket screws by one half turn with a Phillips head screwdriver on the female bracket.

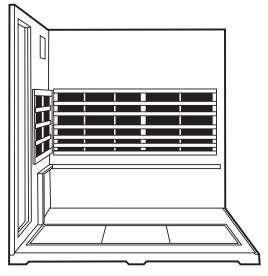

Left Side Wall Installed

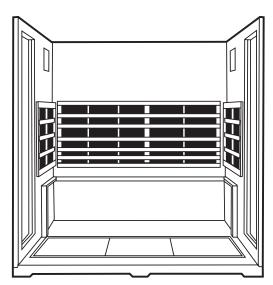


Right Side Wall Installed




### 5 - INSTALLING UNDER BENCH SUPPORT

Slide down the bench heater panel by lining up its sides with the vertical guides on the left and right side wall panel.

- 1. Be careful not to scratch the side panels when positioning the heater panel.
- 2. Push the bench heater panel all the way down until it is touching the floor panel and securely in place.

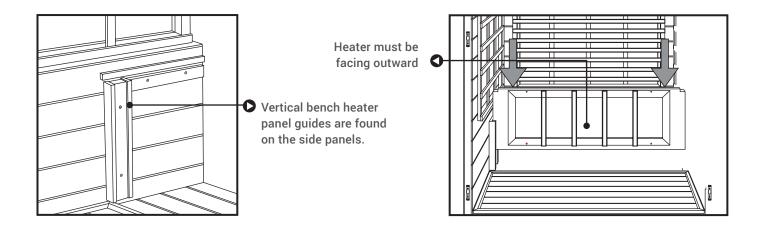

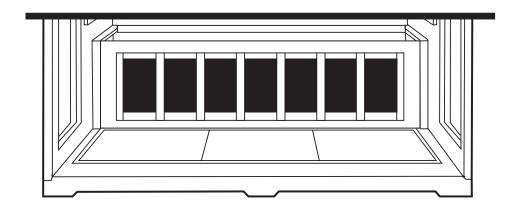



#### 6 - CONNECT HEATER CONNECTION UNDER BENCH


Plug in the connectors under the bench as follows:

#### Left Side Wall:

- 1. Locate the short cable coming out of the floor with a single black and white cable and a single green cable. This cable is comes threaded through the hole of the white cable cover.
- 2. Locate the cable coming out of the under bench support. Feed this cable through the open hole in the bottom of the white cable cover.
- 3. Connect these cable to the cables coming out of the white box on the left side wall. You can connect the black and white cables from the floor and underbench support to any black and white cable coming out of the box as long as you match cable colors. You can connect the green cables to any of the green cables coming out of the box as long as you match cable colors.
- 4. Screw on the cover to cover the wires on the side wall.

### Back Wall:

- 1. Locate the longer cable coming out of the floor that feeds through a hole in the white cover.
  - Connect the longer cable coming out of the floor to the like connector in the cables coming out of the white box on the back wall. Connect the cable with two wires to the cable with two wires in the back all. Connect the cable with four wires to the cable with four wires coming out of the back wall.
- 2. The additional plate on the back wall is used to connect the Vibration Resonance Therapy (VRT) to your sauna.
- 3. If you purchased the VRT, follow the installation instructions included with the VRT.
- 4. Screw on the cover to cover the wires on the back wall.

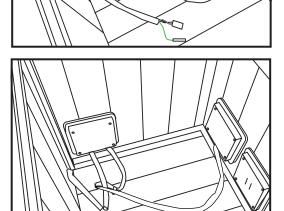



You can plug any male connector to any female one as long as the colors match.



### 7 - INSTALLING THE BENCH: OUTDOOR 2




Follow section 7 to install bench for the Outdoor 2. Follow section 8 to install the bench for the Outdoor 5.


Install the bench panel by sliding it over the horizontal bench guides on the side panels. Be careful not to scratch the adjacent panels when sliding in the bench.


Push the bench all the way in until it touches the back panel and is securely in place.

The bench is reversible. One side is ergonomic and one side is flat. You can reverse the bench after the sauna installation is finished. Be sure that the bench is pushed all the way back until it slides under the heater guard to secure the bench in place.



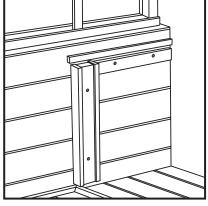

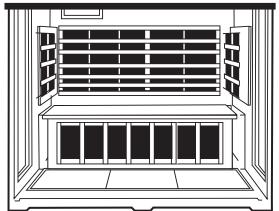

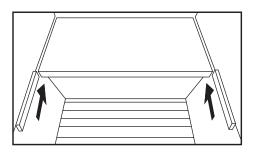


**Optional:** After the bench is installed, you can slide in the included wood pieces to prevent the bench from sliding left to right. One piece can be placed on each side next to the bench. If you decide to flip the reversible bench over, please remove the wood pieces first.




### 8 - INSTALLING THE BENCH: OUTDOOR 5

- 1. Install the left side bench piece first by sliding it over the horizontal bench guides on the side panels. Be careful not to scratch the adjacent panels when sliding in the bench. Push the bench all the way in until it touches the back panel and is securely in place.
- 2. Install the right side of the bench in the same method as above.

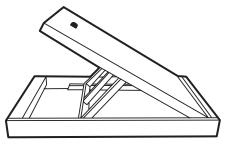




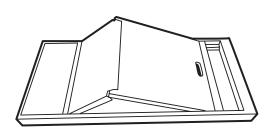

Right Side Bench


3. Be sure that the bench is pushed all the way back until it slides under the heater guard to secure the bench in place.

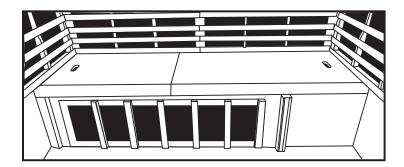




### 9 - INSTALLING THE FRONT WALL


- 1. Place the front wall in the slot in the floor.
- 2. Align the brackets in the front wall and make sure they are locked in place in the same way that you installed the side walls.

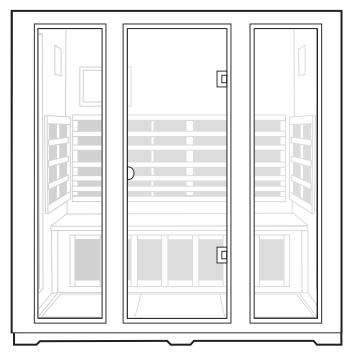

### 10 - INSTALLING THE ROOF PANEL

1. Lower the roof panel on the assembled panels.

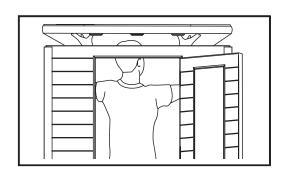


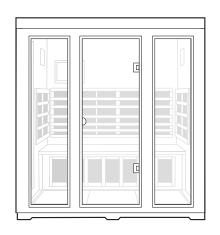



### 11 - CONNECT HEATERS IN ROOF

- 1. Locate the "trap" doors that open in the wood roof.
- 2. Connect the cables under the trap door to the same colored connector in the roof (e.g. black/ white, red/black, yellow/black etc.)
- 3. Connect the green ground wire that come out of the side wall to the green ground wire that is in the wood roof.
  - Push the wiring inside the roof area and close the roof door compartments.
- 4. In the left side wall compartment, there will be two connectors: 1) Heater connector. 2) Keypad connector. The heater connector is a two wire connector. The keypad connector is a seven wire connector.

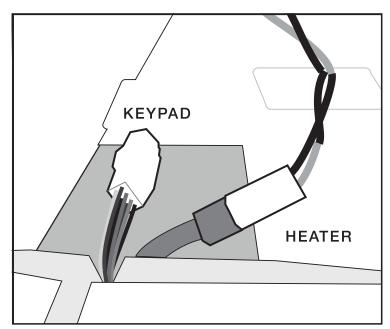




BE SURE TO MATCH THE COLORS IN THE CONNECTORS. THE BLACK WIRE SHOULD MATCH UP WITH THE BLACK WIRE, ETC.

### 12 - INSTALLING DOOR HANDLE

- 1. Locate the door handle.
- 2. Attach the door handle using the enclosed screws.

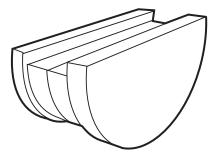




**Note**: If you are using a tablet or smartphone to control your sauna, the door handle will act as both the door handle and tablet/smartphone holder when the door is closed.




### 13 - INSTALLING FULL SPECTRUM FRONT HEATERS


1. Locate the two (2) front heater wood supports, four (4) screws and eight (8) washers for the Full Spectrum front heaters.




0	0	0	0
0	0	0	٥
٥			0


2. One heater will be mounted on each side of the front wall. Lay down of the heaters face down and attached the two wood supports to the heater as show in the photo below.

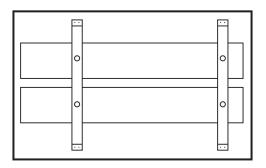

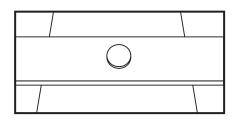

3. Align the Full Spectrum heater with the front floor plug in the right front of the sauna. Plug in the heater.

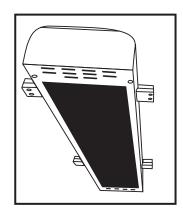


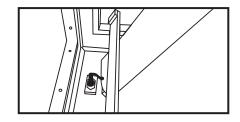




### 13 - INSTALLING FULL SPECTRUM FRONT HEATERS

4. Make sure the heater is flush against the floor and the front wall and screw in the wood supports to the front wall with screws provided.

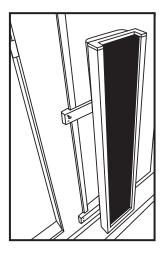

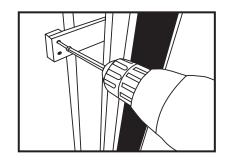

5. Repeat the step above for the left front Full Spectrum Heater.





**Warning Notice**: The infrared heaters in your sauna are a potential BURN HAZARD. Do NOT touch the infrared heater when they are in operation and allow to cool before servicing.



### 14 - INSTALLING THE ROOF CAP

- 1. Install the roof cap by lifting it up over the sauna and placing it on the sauna cabin. The roof cap is very heavy and may take several people to lift it and place it on the sauna. Make sure the roof cap is well seated on the sauna and is even.
- 2. After the roof cap is in place, locate the four (4) roof cap screws. From inside the sauna, find the four holes in the ceiling in the corners and screw the roof cap in place.

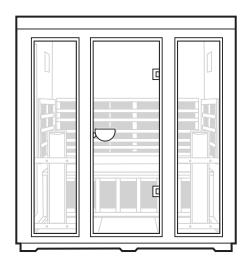

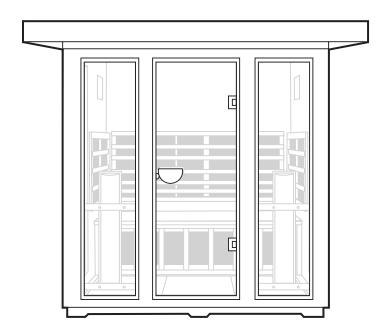

### 15 - LOCATING AND PLUGGING IN POWER CORD

The power cord comes out of the back wall of the sauna. If you are standing facing the sauna, the power cord comes out of the rear left corner about 6 inches (15 cm) from the floor. The power cord will plug into the appropriate electrical receptacle.



**Note**: We do not recommend using an extension cord for your sauna. Please plug the sauna directly into the wall receptacle.




### 16 - OPTIONAL ROOF TIE - DOWN SYSTEM


If you have your sauna located in a windy area, the Roof Tie -Down Security System should be installed. Please follow the following instructions for installing this system.

- 1. We recommend that the large J bolt be secured in the ground with cement. Dig a hole for the J bolt ground anchor with the top eye hook exposed above the ground. Fill the hole with cement and let the cement dry.


2. Screw in the Roof Anchors in the screw holes in the left and right side of the roof cap.




3. Slide the supplied metal cable in to one side of the metal crimp lock. Thread the cable through the Roof Anchor eye hook then through the other side of the metal crimp lock. Crimp the Crimp Lock using pliers to secure the cable in place. Secure this with the cable lock supplied.

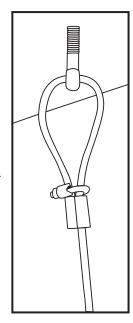

4. Repeat section 3 above with the other end of the metal cable securing it to the J bolt ground anchor. Be sure the cable is pulled tight.



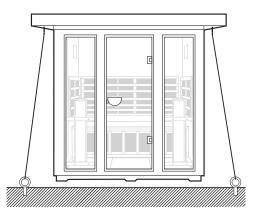




### 17 - INSTALLATION IS COMPLETE

Installation of your sauna is now complete. Using a damp cloth, wipe out the sauna to remove any excess saw dust that may have settled on the wall & floor panels and the heater panels during manufacturing and shipment.

Please refer to usage instructions located later on in this manual.

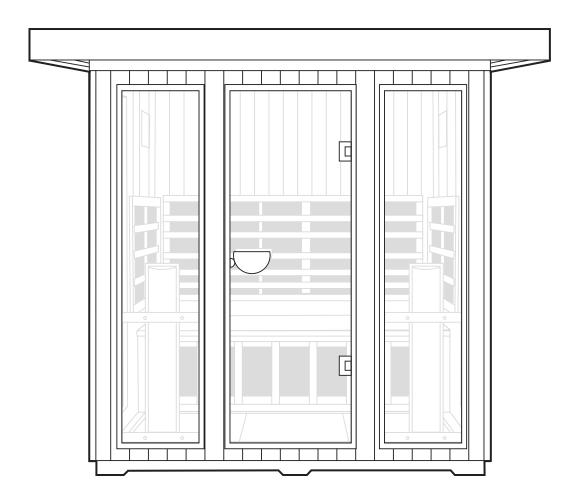



Infrared Saunas and Wellness Solutions

# **Enjoying Your Sauna**

#### **ENJOY YOUR SAUNA!**

Your sauna is now ready for use and you are about to enjoy the finest infrared sauna experience available. Make sure you have a plenty of water to drink and enough towels. Sit back and relax as you are now on your way to better health.

Infrared heat works by warming your body directly without having to heat the air inside the sauna. Breathing is easier and healthier because the air temperature is not heated to the same degree as other types of saunas. The infrared heat penetrates deeply into your body to relax sore muscles and help alleviate pain. The bench, walls and fixtures are not hot to the touch. This allow for a more enjoyable sauna session.

# Instructions for use

Review all health and safety instructions. If in doubt as to the advisability of using your infrared sauna, consult with your physician. If you feel light-headed or heat-exhausted during a session, exit the sauna immediately.

- 1. Select the desired session temperature and time using the control panel.
- Allow approximately 10-15 minutes for the sauna to warm up before beginning a session.
- Starting out, we recommend that your sauna session does not exceed 30 minutes.
- 4. When the temperature reaches the level set on the control panel, the heaters will turn off and on periodically in order to maintain the desired temperature level inside the sauna. **Keeping the thermostat set at its maximum will ensure the heaters stay on continuously.**
- 5. The ceiling vent(s) in the roof panel can be opened at any time to allow fresh air into the sauna.
- 6. Infrared's unique property of direct penetration into the body without heating the intervening space in-between allows the users to enjoy all of its benefits while the door is open for ventilation.
- 7. Always drink plenty of water before, during, and after a session. Doing so will replenish fluids lost from the body through perspiration.
- 8. Choosing to take a hot shower or bath prior to the sauna session will further promote perspiration. However, dry off thoroughly before going into the sauna because excessive water will stain or warp the wood. A shower after the session is refreshing and rinses perspiration from the body.
- 9. To absorb perspiration and keep the sauna tidy during the session, place a towel on the bench and floor of the sauna. Keep one towel handy to wipe excessive perspiration from your body.
- 10. Your Clearlight® Infrared Sauna is made of the finest Western Red Canadian Cedar, Mahogany or Basswood. If the light fragrance of the fresh wood is too strong during the first few months of usage, wipe the wood with a damp cloth to minimize the aroma.



### **USING YOUR INFRARED SAUNA**

Unlike a traditional sauna, infrared heats the body directly. Air temperature in the sauna is not as important as the type and quality of the infrared being received. We recommend the following protocol:

- a. Turn the sauna on for 10 minutes to allow the heaters to come up to optimal temperature and for the cabin to warm to a comfortable temperature.
- b. When you enter the sauna, set the time to the desired session time and turn the thermostat up to 150+F / 65C. This will keep the heaters are on the entire time to ensure that you are receiving constant infrared heat. During a 30 minute sauna session, the air temperature will reach between 115-125F / 46-51C depending on the starting ambient air temperature.
- c. Sit back and relax. Enjoy your sauna session.

When connected to the properly grounded power source, your Clearlight® sauna will turn ON to the set temperature and count-down with a few pushes of the Power button.



# Sauna Session Time

You can set the duration of your sauna session for a maximum of 60 minutes. Press the TIME UP or TIME DOWN buttons to increase or decrease your desired sauna session time in 5 minute increments.

Clearlight®

38°C P2 ♣ 45:23 R G B

≋95%

When you have reached your desired time, release the button.



# System On/Off

- 1) Press the "POWFR" button once to turn on the sauna.
- 2) Your session will automatically end after the programmed timer expires.
- 3) ress the "POWER" button at any time turn off the sauna.

# Controlling the Set Temperature

You can program your sauna for a maximum temperature of 175°F (80°C). Press the TEMP UP/DOWN (+/-) buttons to set the desired temperature. When the display shows your desired temperature, release the buttons. Press either the TEMP UP or TEMP DOWN buttons during your sauna session to manually control the desired cabin temperature. \*See "Instructions For Use" on next page for recommendations.

www.infraredsauna.com



### **USING YOUR INFRARED SAUNA**

### Fahrenheit & Celsius

You can alternate between Fahrenheit and Celsius by pressing the F/C button on the keypad.

# Inside / Outside Light

- 1. Press the button labeled "INSIDE" to turn on or off the Interior light.
- 2. Press the button labeled "OUTSIDE" to turn on or off the exterior light and the heater backlights.

### **Full Spectrum**

Press the "Full Spectrum" button to change the intensity of the front Full Spectrum heaters.

The heaters will turn on initially at 100%.

- 1. Press the button once to change to 50% intensity.
- 2. Press the button a second time to change to 75% intensity.
- 3. Press the button a third time to change to 100% intensity.



**Note**: The intensity will be displayed on the keypad.

#### Reservation

You can preset your sauna to turn on up to 36 hours in the future:

- 1. Press the POWER button to turn on your sauna.
- 2. Set the desired temperature and time that you would like the sauna to start at when the power comes on.
- 3. Press the RESERVE button.
- 4. The time will begin to flash.
- 5. Press the TIME UP button to set the number of minutes or hours ahead you would like your sauna to turn on.
- 6. The range is 1 36.
- 7. Set the maximum set temperature by pressing the TEMP UP or TEMP DOWN button.
- 8. The keypad will flash and the time will count down in one hour increments until the sauna turns on.
- 9. To cancel the reservation, press the "POWER" button once to turn off the sauna.

#### **AUX**


The AUX button will be used to control additional features that can be added to your sauna. The instructions to use these features will be included when the item is purchased.




### **USING YOUR INFRARED SAUNA**

# **Keypad Lock**

The keypad can be locked to prevent it from being turned on or off or the temperature adjusted. There are two locking functions:







Note: With the keypad locked, the time will continue to count down and the sauna will turn off when the time is expired.


# **Audio System**


Your Clearlight® sauna is equipped with stereo speakers that can be accessed by either Bluetooth or through the Aux 3.5 mm connection in the charging compartment. You can also charge your device via the USB connection in the charging compartment.

- 1. Your Clearlighti® sauna is Bluetooth ready. To connect audio via Bluetooth:
  - A) Open your Bluetooth enabled phone, tablet or computer and search for surrounding Bluetooth devices to find a device called **Infrared Sauna**. The pairing code for this device is **0000**.
- 2. There is a 3.5mm jack in the charging compartment that is connected to the speakers in your sauna. You can connect any audio to the speakers using this connection.

# **Accessory Outlets**

- `1. There is a 12v accessory outlet and receptacle for the optional Aromatherapy Diffuser located on the side wall of your sauna.
  - A) If you purchased the Aromatherapy Diffuser, plug it into the small top outlet when you want to use it.
  - B) The toggle switch allows you to turn on and off the Aromatherapy Diffuser.
  - C) The 12v receptacle is an accessory outlet so you can plug in additional equipment during your sauna session.







### **USING YOUR INFRARED SAUNA**

# Chromotherapy

Color light therapy can benefit your well being. Chromotherapy or Color Light Therapy is the science that uses the seven colors of the light spectrum. The seven colors have the ability to affect the vibrations of the body various frequencies. For optimal health, we all need the light of the sun. We receive light from the sun which is divided into 7 main groups of rays which are absorbed by our bodies.

Chromotherapy works on various energy points to help balance your body using the full spectrum of visible light. Color and light have been utilized by healers for thousands of years. Color therapy possibly has roots in Ayurveda, ancient Egyptian culture and traditional Chinese healing.

Alternative medicine practitioners who use chromotherapy often relate the seven colors of the color spectrum to specific body areas. Color has a profound effect on us on all levels, physical, mental, emotional and spiritual.

The chromotherapy light is controlled by either touching the metal plate on the side of the chromotherapy unit or by pressing the buttons on the included remote control.

- 1. Press the "POWER" button to turn on the Chromotherapy light.
- 2. Press the "MANUAL" button to manually select a color.
- 3. Press the "AUTO" button and the Chromotherapy light will automatically change through the various colors.
- 4. Press the "INTENSITY" up or down buttons to control the brightness of the Chromotherapy light.

The available color in the Chromotherapy light have been specifically selected based on their wavelength:

- 1) Red: Activates the circulatory and nervous systems.
- 2) Strong Green: Provides anti-infectious, anti-septic and regenerative stimulation.
- 3) Strong Blue: Lubricates joints. Helps address infections, stress, nervous tension.
- 4) Orange: Energized and eliminates localized fat. Helps address asthma and bronchitis.
- 5) Green: Acts as a relaxant.
- 6) Blue: Stimulates muscle and skin cells, nerves and the circulatory systems.
- 7) Strong Yellow: Strengthens the body and acts on internal tissue.
- 8) Strong Indigo: Helps address eye inflammation, cataracts, glaucoma and ocular fatigue.
- 9) Strong Pink: Act as a cleanser, strengthening the veins & arteries.
- 10) Yellow: Reactivates and purifies the skin. Helps with indigestion and bodily stress.
- 11) Indigo: Activates and eliminates impurities from the blood stream.
- 12) Violet: Relaxes the nerves & lymphatic system. Addresses inflammation and urinary illness.



# Tips for Use

- 1. Opening the roof vent and/or door allows fresh air to enter the sauna.
- 2. Drink liquids prior to and after your session.
- 3. Towel off during your session. This will help the body prespire more freely.
- 4. To relieve sore and tight muscles massage these areas for faster healing and effectiveness
- 5. Oil and lotions tend to decrease perspiration by blocking pores. Apply these after your session for best results.
- 6. Some minerals can be lost in perspiration. Eating a sensible diet including fruits and green leafy vegetables will replace these. Supplements can also be taken to replenish minerals.
- 7. Limit food intake an hour before your sauna session. Your body will be able to detox more effectively because it will not be using that energy for digestion.
- 8. Taking a shower or bath before a sauna session tends to increase perspiration as bathing opens the pores.
- 9. Use at least 2-3 towels for maximum comfort.
  - a. Sit on one towel folded over several times for added cushioning.
  - b. Use another towel on the floor to absorb extra perspiration.
- 10. At the first sign of cold or flu, increasing your sauna sessions may be beneficial in boosting your immune system and decreasing the reproductive rate of the viruses. Consult your physician for the proper treatment for this, or any other condition.
- 11. As you become more heat conditioned, you may wish to increase the length of your Clearlight® sauna session to 40 minutes. This is especially useful for soft tissue therapy. (Make sure to drink fluids throughout your sauna session.)



# Tips for Use

- 12. If you notice any drying of your skin with ongoing use of your Clearlight® sauna or wish to maximize the detoxification benefits from your Sauna, it is suggested that you obtain the best quality oil available (i.e. expeller pressed oil such as Organic Canola Oil or Organic Coconut Oil are very good). Add 2-4 tablespoons a day to your diet. The essential oils in these products are needed for skin health and allow the body to let go of stored toxins, fat and cholesterol.
- 13. Unlike a traditional sauna, infrared heats the body directly. Air temperature in the sauna is not as important as the type and quality of the infrared being received. We recommend the following protocol:
  - a. Turn the sauna on for 10-15 minutes to allow the heaters to come up to optimal temperature and for the cabin to warm to a comfortable temperature.
  - b. When you enter the sauna, set the time to the desired session time and turn the thermostat up to 158 degrees. This will keep the heaters on the entire time to ensure that you are receiving constant infrared heat. **During a 30 minute sauna session, the air temperature will reach between 115-125F.**
  - c. Sit back and relax. Enjoy your sauna session.

We hope you enjoy years of relaxation and better health from regular use of your Clearlight® sauna. If you have any question on the proper use of your sauna, please call us at 800.798.1779 or +1.510.601.1775.

Clearlight® saunas... Here's to good health!



# Safety Instructions

- 1. Read and follow all instructions carefully.
- 2. When installing and using this electrical equipment, basic safety precautions should always be followed.
- 3. To reduce the risk of injury, do not allow children to use the sauna unless they are closely supervised at all times.
- 4. Do not use the sauna immediately following strenuous exercise. Wait at least 15 minutes to allow the body to cool down completely.
- 5. Excessive temperatures have a high potential for causing fetal damage during the early months of pregnancy. Pregnant or possibly pregnant women should contact their physician prior to using the sauna.
- 6. Hyperthermia Danger: Prolonged exposure to hot air will induce hyperthermia. Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6F (37C). While hyperthermia has many health benefits, it is important not to allow your body's core temperature to rise above 103F (39.5C). Symptoms of excessive hyperthermia include dizziness, lethargy, drowsiness, and fainting. The effects of excessive hyperthermia may include failure to perceive heat, failure to recognize the need to exit, unawareness of impending hazard, fetal damage in pregnant women, physical inability to exit the sauna, and unconsciousness.
- 7. The use of alcohol, drugs, or medications prior to or during the sauna session may lead to unconsciousness.
- 8. Persons suffering from obesity or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician prior to using the sauna.
- 9. Persons using medications should consult a physician before using the sauna since some medications may induce drowsiness while others may affect heart rate, blood pressure, and circulation.



# Safety Instructions

- 10. Exercise care when entering or exiting the sauna.
- 11. Never sleep inside the sauna while the unit is in full operation.
- 12. Do not use any type of cleaning agents on the interior of the sauna.
- 13. Do not stack or store any objects on top of or inside the sauna.
- 14. If the power supply cord becomes damaged, it must immediately be replaced by the manufacturer or its agent or a similarly qualified person to avoid a hazard.
- 15. Do not use the unit during an electrical storm, as there is a remote risk of shock.
- 16. Altering or tampering of any electrical connections on the power supply will void the manufacturer's warranty.
- 17. Dry your hands before handling electrical controls. Never unplug the power cord or adjust the controls with wet hands or when you have wet bare feet. A danger of electrical shock exists.
- 18. Do not attempt any repair without consulting the manufacturer first. Unauthorized repair attempts will void manufacturer's warranty.
- 19. We strongly recommend the use of a GROUND FAULT CIRCUIT INTERRUPTER (GFCI) device in any potentially wet locations.
- 20. Your Clearlight® sauna is made of the finest Canadian Cedar or Basswood. All wood products have variations in the color, grain, and may have irregularities such as knots, and fine cracks. These reflect reflect the natural beauty of the wood and should not be considered defects.
- 21. To safeguard against burns, do not touch heaters or lamps directly.



# Important Safeguards

#### **IMPORTANT SAFEGUARDS**

- 1. **READ INSTRUCTIONS** All safety and operating instructions should be read before the sauna is installed & operated.
- 2. **RETAIN INSTRUCTIONS** The safety and operating instructions should be retained for future reference.
- 3. **HEED WARNINGS** All warnings on the sauna should be adhered to.
- 4. FOLLOW INSTRUCTIONS All operating and usage instructions should be followed at all times.
- **5. CLEANING** Unplug the sauna from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleansers inside the sauna. Use a damp cloth for cleaning.
- **6. ATTACHMENTS** Do not use attachments that are not recommended by the manufacturer as they may cause hazard.
- 7. WATER OR MOISTURE Do not use this product near water-for example near a bathtub, in a wet basement, or near a swimming pool or similar area.
- **8. GROUNDING OR POLARIZATION** This sauna is intended for use with a 3-wire properly grounded power socket Do not defeat the safety purpose of the supplied line cord and plug.
- **9. POWER SOURCES** This product should be operated only from the required type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
- **10. POWER-CORD PROTECTION** Power supply cords should be routed so they are not likely to be walked on or pinched.
- **11. LIGHTNING** For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet.
- **12. OVERLOADING** Do not overload wall outlets and extension cords as this can result in a risk of fire or electrical shock.



# Important Safeguards

### **IMPORTANT SAFEGUARDS**

- 13. SERVICING Always unplug this product from the wall outlet before servicing the product.
- **14. POWER SUPPLY** Do not remove power supply covers. No user-serviceable parts are located inside the power supply.
- **15. REPLACEMENT PARTS** When replacement parts are required, only use parts specified by the manufacturer. Unauthorized substitutes could result in fire, electrical shock or other hazards.
- **16. SAFETY CHECK** Upon completion of any service or repairs to this product by a service technician, ask the technician to perform safety checks make certain that the product is in proper operating condition.



## **SAUNA WORKS LIMITED LIFETIME WARRANTY**

Sauna Works, Inc. ("Company") offers the following to the original purchaser of any Sauna Works manufactured or distributed Clearlight® saunas ("Sauna") and designated parts and accessories:

Product	Indoor Residential-Use Saunas*	Outdoor Residential-Use Saunas	Commercial-Use Saunas
Clearlight® brand sauna Cabin	Lifetime	5 Years	5 Years
Factory-Installed Sauna Controls and Wiring	Lifetime	Lifetime	5 Years
Factory-Installed Heater Components	Lifetime	Lifetime	5 Years
Factory-Installed Audio Components	Lifetime	Lifetime	5 Years
Labor on Clearlight® brand sauna Cabin (USA & Canada only)	7 Years	5 Years	5 Years
Labor of Factory-Installed Components (USA & Canada only)	7 Years	5 Years	5 Years
Water-Resistant Cover (fabric only)	1 Year	1 Year	1 Year
Non-Factory Installed Components, Options, Parts and Accessories	Per manufacturer's warranty unless specified in Sauna Works' Quote, Invoice or Website		

<sup>\*</sup>Extends to outdoor use if purchased simultaneously with and kept continually covered by the Sauna Works water-resistant cover specified for that Sauna model.

www.infraredsauna.com



### SAUNA WORKS LIMITED LIFETIME WARRANTY

For the coverage period specified ("warranty period"), Company agrees to repair or replace, at its sole option, the products listed above, subject to and solely in accordance with the terms, conditions, exclusions and limitations set forth herein. PLEASE READ THIS LIMITED WARRANTY IN ITS ENTIRETY TO UNDERSTAND YOUR RIGHTS AND OBLIGATIONS.

### LIMITED WARRANTY ON SAUNA CABIN AND FACTORY-INSTALLED COMPONENTS

Company warrants to the user during the warranty period (a) that the Sauna Cabin will maintain its structural integrity and for outdoor models, that it will not leak, and (b) that factory-installed components (i.e., heater controls, power supply, electrical wiring, and audio system) will be free from defects in material or workmanship. This limited warranty shall not apply to any display model unless expressly agreed by Sauna Works in writing at the time of purchase or to any Sauna installed more than six months after the delivery date.

### LABOR WARRANTY FOR SAUNA CABIN AND FACTORY-INSTALLED COMPONENTS

The Sauna cabin and factory-installed components are covered under Company's labor warranty for the specified labor warranty period.

# LIMITED WARRANTY ON NON-FACTORY-INSTALLED COMPONENTS, OPTIONS, PARTS AND ACCESSORIES

Non-factory installed components, and Sauna Works options, parts and accessories are not warranted to the user against defects in material or workmanship except to the extent of any warranty period expressly set forth in the Sauna Works final quote or invoice. These items may also be covered by a manufacturer's warranty which may have a longer duration than this limited warranty. Please confirm with the manufacturer of these items the duration of its warranty. If no warranty period is specified, only the manufacturer's warranty, if any, shall apply. The Sauna Works water-resistant cover warranty only applies to the cover's fabric under normal usage and environmental exposure. It does not cover failure or unserviceability resulting from excessive environmental exposure, cleaning or other chemicals, or failure to follow the care instructions included with the cover.



### **SAUNA WORKS LIMITED LIFETIME WARRANTY**

### DISCLAIMER OF IMPLIED WARRANTIES

ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED IN THEIR ENTIRETY OR TO THE FULLEST EXTENT ALLOWED BY LAW. THIS LIMITED WARRANTY TAKES THE PLACE OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, IN FACT OR AT LAW, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

#### WARRANTY LIMITATIONS AND EXCLUSIONS

The warranty period begins on the date the unit is purchased by the user. This warranty may not be transferred, sold, donated, gifted or assigned to a third party except with the prior written consent of Sauna Works, in its sole and absolute discretion. Absent written consent, only the original purchaser can make claims hereunder. All warranty labor must be performed by Company or its designated representative using authorized Sauna Works parts. No agent, dealer, distributor, service company or other party is authorized to change, modify. or extend the terms of this limited warranty in any manner whatsoever. Any warranty so provided shall be solely their separate obligation. As used in this warranty, (a) "commercial use" shall mean any use that involves a fee, rate, charge, or other consideration, any use directly or indirectly in connection with a business, going concern, or undertaking intended for profit or pecuniary gain, and any non-residential use, (b) "residential use" shall mean when purchased for use by a single-family for internal household purposes, and (c) "user" shall mean the original purchaser.

The limited warranty does not cover defects, damage, or failure ("Damage") caused by the delivery service providers or common carrier, the installer, user, or other persons and animals, including without limitation, termites and other wood-destroying insects or rodents. The limited warranty excludes Damage resulting from transportation, careless handling, improper location, storage, or relocation, as well as from cleaning, painting, staining or other use of abrasive or improper chemicals. The limited warranty also excludes Damage arising from user's or a third party's negligence; modification of any type for any reason (including modification to meet local codes); improper installation (including installation not in accordance with instructions and specifications provided with the unit); connections supplied by the installer of the equipment, an electrician or a third party; improper voltage supply; unauthorized electrical modification; misuse; improper use; abuse; incorrect operation, lack of proper routine or preventive maintenance; unauthorized repair by a third-party; normal wear and tear; fire, and acts of God such as lightning, floods, earthquakes, etc. Outdoor-Use Sauna warranties do not include damage arising from a failure (i) to maintain the Sauna on a flat, level, hardtop surface with adequate drainage and (ii) to keep the exterior free and clear from plants, trees, grasses, soil, and snow deposits.

CALL NOW 800.798.1779 www.infraredsauna.com

33



### SAUNA WORKS LIMITED LIFETIME WARRANTY

The limited warranty does not include: labor, transportation, or other costs incurred in the removal and/or reinstallation of the original unit and/or installation of a replacement unit; any costs relating to obtaining access for repair; or loss of use damage, including loss of sales, profit or business advantage of any kind under any circumstances. The labor warranty is provided in the United States of America and Canada only. User shall be obligated to pay for postage and handling for mailing and delivery of any products outside the United States and Canada. Dated proof of purchase of the product is required for a warranty claim. These disclaimers shall be equally applicable to any labor or service provided by Company and its designated representatives.

### **RESPONSIBILITIES OF OTHERS**

Unless otherwise expressly agreed in writing, (a) all installers are separately contracted for by user and are not under the direction and control of Company, (b) the installer is the user's responsibility, and (c) Company will have no obligation, liability, or responsibility in connection with the same. Your installer is responsible for inspecting the unit prior to installation and ensuring the unit is free of defect or damage. Notices are placed on and in the unit and on the shipping carton advising the installer of this responsibility. In the event of a problem identified prior to installation, the unit must not be installed, and Company is not responsible for failures or damage that could have been discovered, repaired, or avoided by proper inspection prior to installation. Damage occurring in transit is the responsibility of the carrier. The user or installer MUST open the crate and inspect the unit for damage when it is delivered. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection requested. Failure of the carrier to respond should be reported to the seller and the carrier. Your freight claims should be filed promptly thereafter. Damage occurring to the unit during installation is the responsibility of the installer and/or building contractor and damage occurring thereafter is the responsibility of the user. Failure of any non-factory installed components, parts and accessories is the sole responsibility of the equipment manufacturer except as provided above. Any replacement parts shall be covered only by the original equipment manufacturer warranty, if any. Your installer is responsible for knowing local code requirements and installing the unit safely in accordance with the same. The Company is not responsible for costs to modify any product to obtain any code approval, such as city, county, or state building codes.

#### WARRANTY REGISTRATION

To register your product, please go to our website <u>www.InfraredSauna.com/warrantyform</u>. You will then be prompted to enter your product Serial Number followed by your warranty registration information.



### **SAUNA WORKS LIMITED LIFETIME WARRANTY**

The warranty must be registered within thirty (30) days from the date of purchase in order for this warranty to become effective.

#### WARRANTY SERVICE

For the user's benefit, the Company maintains a list of independent service personnel to perform required warranty service repairs. Such firms are not agents or representatives of the Company and cannot bind the Company by words or conduct.

The Company will provide the warranty service described above when the following conditions have been met: the failure is covered by the warranty; the user has informed an Authorized Sauna Works Warranty Service Department Representative of the nature of the problem <u>during</u> the warranty period; conclusive evidence (e.g., proof of purchase or installation) is provided to the foregoing by the user proving that the failure occurred or was discovered within the warranty period; and, an authorized independent service person or Company representative has been permitted to inspect the unit during regular business hours within a reasonable time after the problem was reported by the user. In order to obtain warranty service, contact Sauna Works at:

www.InfraredSauna.com or Sauna Works, Inc. Warranty Service Department 1077 Eastshore Highway Berkeley, California 94710 Call: (800) 798-1779 or (510) 601-1775

To obtain warranty service, call or write the above. Provide a description of the problem and proof of purchase. You will be instructed how to obtain replacements and where to return, at your expense, the failed component(s), option(s), or accessory(ies). All replacement parts, equipment, and repairs shall assume the remaining warranty period of the part(s) replaced and do not extend the same.

The Company's warranty obligation shall be discharged upon tender of replacement or repair. The customer's refusal to accept the tender terminates the Company's warranty obligation. Company will only pay for shipping and handling fees to return the repaired or replacement unit to you if we elect to replace the defective unit.



### **SAUNA WORKS LIMITED LIFETIME WARRANTY**

**LEGAL RIGHTS:** This Limited Warranty gives you specific legal rights. Warranty obligations are provided by Company and not Clearlight® brand sauna Inc. or its affiliates. There are no warranties applicable to Clearlight® brand sauna products manufactured and distributed by Company, except as expressly stated herein or as implied by applicable state and federal laws. You may also have other rights that vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, disclaimer of certain warranties, or the exclusion or limitation of incidental or consequential damages, so some of the above limitations and exclusions may not apply to you. Company will not be responsible for any statements or representations made in any form that go beyond, are broader than, or are inconsistent with any technical specifications furnished by the Company.

### LIMITATION OF LIABILITY

THE REMEDIES DESCRIBED IN THIS LIMITED WARRANTY ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND COMPANY'S ENTIRE LIABILITY, INCLUDING, WITHOUT LIMITATION, FOR ANY BREACH OF THIS LIMITED WARRANTY. COMPANY'S LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY USER FOR THE APPLICABLE DEFECTIVE PRODUCT, NOR SHALL COMPANY UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. IN ADDITION, THE COMPANY WILL NOT BE RESPONSIBLE FOR CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT FROM ANY CAUSE WHATSOEVER, INCLUDING BUT NOT LIMITED TO COMPANY'S GROSS NEGLIGENCE. THIS EXCLUSION APPLIES EVEN IF COMPANY WAS ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Clearlight® is a trademark of Clearlight Inc. and is used under license by Sauna Works Inc. Sauna Works® is a trademark of Sauna Works, Inc.

